

ОНР 1500, 1800, 20

ГИДРАВЛИЧЕСКИЕ ПОДЪЕМНИКИ

ТЕХ. ХАРАКТЕРИСТИКИ

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-4159
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Саранск (8342)22-96-24
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

Адрес: <https://orsi.nt-rt.ru> || эл.почта: ois@nt-rt.ru


OHP 1500



OHS 1 MOVEMENT: LIFT
OHS 2 MOVEMENTS: LIFT / INCLINATION
OHS 3 MOVEMENTS: LIFT / INCLINATION / SIDE SHIFT MOVEMENT
OHS 4 MOVEMENTS: LIFT / INCLINATION / SIDE SHIFT MOVEMENT /
LOADING BLOCK

TR: WITHOUT DISTRIBUTOR AND WITH PIPES WITH QUICK COUPLINGS TO
BE CONNECTED TO THE TRACTOR DISTRIBUTOR
IR: WITH DISTRIBUTOR AND PIPES WITH QUICK COUPLINGS TO BE
CONNECTED TO THE TRACTOR OIL INLET

 MODEL	 KG	 KG			 cm	 L.MIN.
OHP 1500 250 1TR (1 movement)	311	1500	250	55-75	108	50
OHP 1500 250 2TR (2 movements)	321	1500	250	55-75	108	50
OHP 1500 250 3TR (3 movements)	341	1500	250	55-75	108	50
OHP 1500 250 4TR (4 movements)	416	1500	250	55-75	108	50
OHP 1500 250 2IR (2 movements)	336	1500	250	55-75	108	50
OHP 1500 250 3IR (3 movements)	351	1500	250	55-75	108	50
OHP 1500 250 4IR (4 movements)	429	1500	250	55-75	108	50
OHP 1500 320 1TR (1 movement)	344	1500	320	55-75	108	50
OHP 1500 320 2TR (2 movements)	354	1500	320	55-75	108	50
OHP 1500 320 3TR (3 movements)	374	1500	320	55-75	108	50
OHP 1500 320 4TR (4 movements)	451	1500	320	55-75	108	50
OHP 1500 320 2IR (2 movements)	369	1500	320	55-75	108	50
OHP 1500 320 3IR (3 movements)	384	1500	320	55-75	108	50
OHP 1500 320 4IR (4 movements)	464	1500	320	55-75	108	50
OHP 1500 380 1TR (1 movement)	371	1500	380	55-75	108	50
OHP 1500 380 2TR (2 movements)	371	1500	380	55-75	108	50
OHP 1500 380 3TR (3 movements)	400	1500	380	55-75	108	50
OHP 1500 380 4TR (4 movements)	478	1500	380	55-75	108	50
OHP 1500 380 2IR (2 movements)	396	1500	380	55-75	108	50
OHP 1500 380 3IR (3 movements)	411	1500	380	55-75	108	50
OHP 1500 380 4IR (4 movements)	491	1500	380	55-75	108	50

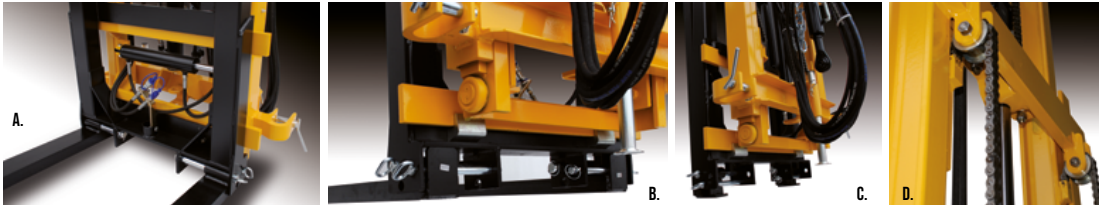

OHP 1500

FEATURES AND STANDARD EQUIPMENT:	OHP 1500 250 1-2-3-4 TR	OHP 1500 250 2-3-4 IR	OHP 1500 320 1-2-3-4 TR	OHP 1500 320 2-3-4 IR	OHP 1500 380 1-2-3-4 TR	OHP 1500 380 2-3-4 IR
C Frame in laminated steel with sliding on tempered rollers	✓	✓	✓	✓	✓	✓
Forks in section, flexible and adjustable (B, C)	✓	✓	✓	✓	✓	✓
N. 2 Lifting chains type BL 534 (D)	✓	✓	✓	✓	✓	✓
Security chain	✓	✓	✓	✓	✓	✓
Sliding coils in special material against usury and self-lubricating (A)	✓	✓	✓	✓	✓	✓
3° Point linkage CAT. II (F)	✓	✓	✓	✓	✓	✓
Loading hook	✓	✓	✓	✓	✓	✓
Towing hook (I)	✓	✓	✓	✓	✓	✓
3° Point cylinder (run 180 Ø 60) (G)	✓	✓	✓	✓	✓	✓
Hook on the traslator for final tools	✓	✓	✓	✓	✓	✓
N. 2 Pulleys in FE360 with bearings 6305	✓	✓	✓	✓	✓	✓
Safety valve on lifting cylinder and on inclination cylinder (H)	✓	✓	✓	✓	✓	✓
Central lifting cylinder double-acting	✓	✓	✓	✓	✓	✓
Front foot	✓	✓	✓	✓	✓	✓
OPTIONAL						
Surcharge for Electric Switch, with wiring and joystick to be connected to the tractor distributor	-	3 mov. 4 mov.	-	3 mov. 4 mov.	-	3 mov. 4 mov.
Surcharge for electric Switch, to be assembled on the double inclination with wiring and joystick to be connected to the tractor distributor	-	3 mov. 4 mov.	-	3 mov. 4 mov.	-	3 mov. 4 mov.
Switch block for Fendt 206-209V	-	•	-	•	-	•
Surcharge for electric distributor setted up for 4 movements , with wiring and push button panel	-	•	-	•	-	•
Surcharge for electric distributor setted up for 4 movements , to be assembled on the double swinging with wiring and push button panel	-	•	-	•	-	•
Surcharge for 2 levers cloche distributor	-	•	-	•	-	•
Surcharge for higher side shift of 150mm	•	•	•	•	•	•
Surcharge loading block "maxi L"	•	•	•	•	•	•
Surcharge loading block "maxi XL"	•	•	•	•	•	•
Surcharge for folding loading block	•	•	•	•	•	•
Pump group (NOT WITH ELECTRIC SWITCH)	-	•	-	•	-	•
Surcharge for double swinging for forklifts	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.
Surcharge for a pair steel forks	•	•	•	•	•	•
Surcharge for a pair of FEM2 forks with plate support	•	•	•	•	•	•
Surcharge pair of FEM2 folding forks with plate support	•	•	•	•	•	•
Surcharge for a pair of FRS forks	•	•	•	•	•	•
Surcharge for round bales (IN PLACE OF FORKS)	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400



✓ STANDARD EQUIPMENT | • OPTIONAL EQUIPMENT | - NOT AVAILABLE



OHP 1800



OHS 1 MOVEMENT: LIFT
OHS 2 MOVEMENTS: LIFT / INCLINATION
OHS 3 MOVEMENTS: LIFT / INCLINATION / SIDE SHIFT MOVEMENT
OHS 4 MOVEMENTS: LIFT / INCLINATION / SIDE SHIFT MOVEMENT /
LOADING BLOCK

TR: WITHOUT DISTRIBUTOR AND WITH PIPES WITH QUICK COUPLINGS TO
BE CONNECTED TO THE TRACTOR DISTRIBUTOR
IR: WITH DISTRIBUTOR AND PIPES WITH QUICK COUPLINGS TO BE
CONNECTED TO THE TRACTOR OIL INLET

MODEL	 KG	 KG			 cm	 L MIN.
OHP 1800 250 1TR (1 movement)	325	1800	250	55-75	108	50
OHP 1800 250 2TR (2 movements)	335	1800	250	55-75	108	50
OHP 1800 250 3TR (3 movements)	355	1800	250	55-75	108	50
OHP 1800 250 4TR (4 movements)	424	1800	250	55-75	108	50
OHP 1800 250 2IR (2 movements)	348	1800	250	55-75	108	50
OHP 1800 250 3IR (3 movements)	363	1800	250	55-75	108	50
OHP 1800 250 4IR (4 movements)	442	1800	250	55-75	108	50
OHP 1800 320 1TR (1 movement)	357	1800	320	55-75	108	50
OHP 1800 320 2TR (2 movements)	366	1800	320	55-75	108	50
OHP 1800 320 3TR (3 movements)	386	1800	320	55-75	108	50
OHP 1800 320 4TR (4 movements)	473	1800	320	55-75	108	50
OHP 1800 320 2IR (2 movements)	381	1800	320	55-75	108	50
OHP 1800 320 3IR (3 movements)	396	1800	320	55-75	108	50
OHP 1800 320 4IR (4 movements)	476	1800	320	55-75	108	50
OHP 1800 380 1TR (1 movement)	383	1800	380	55-75	108	50
OHP 1800 380 2TR (2 movements)	395	1800	380	55-75	108	50
OHP 1800 380 3TR (3 movements)	413	1800	380	55-75	108	50
OHP 1800 380 4TR (4 movements)	491	1800	380	55-75	108	50
OHP 1800 380 2IR (2 movements)	407	1800	380	55-75	108	50
OHP 1800 380 3IR (3 movements)	425	1800	380	55-75	108	50
OHP 1800 380 4IR (4 movements)	506	1800	380	55-75	108	50

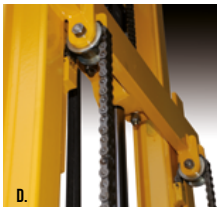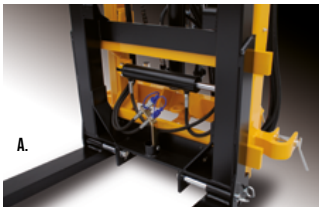  

OHP 1800

FEATURES AND STANDARD EQUIPMENT:	OHP 1800 250 1-2-3-4 TR	OHP 1800 250 2-3-4 IR	OHP 1800 320 1-2-3-4 TR	OHP 1800 320 2-3-4 IR	OHP 1800 380 1-2-3-4 TR	OHP 1800 380 2-3-4 IR
C Frame in laminated steel with sliding on tempered rollers	✓	✓	✓	✓	✓	✓
Forks in section, flexible and adjustable (B, C)	✓	✓	✓	✓	✓	✓
N. 2 Lifting chains type BL 534 (D)	✓	✓	✓	✓	✓	✓
Security chain	✓	✓	✓	✓	✓	✓
Sliding coils in special material against usury and self-lubricating (A)	✓	✓	✓	✓	✓	✓
3° Point linkage CAT. II (F)	✓	✓	✓	✓	✓	✓
Loading hook	✓	✓	✓	✓	✓	✓
Towing hook (I)	✓	✓	✓	✓	✓	✓
3° Point cylinder (run 180 Ø 60) (G)	✓	✓	✓	✓	✓	✓
Hook on the traslator for final tools	✓	✓	✓	✓	✓	✓
N. 2 Pulleys in FE360 with bearings 6305	✓	✓	✓	✓	✓	✓
Safety valve on lifting cylinder and on inclination cylinder (H)	✓	✓	✓	✓	✓	✓
Central lifting cylinder double-acting	✓	✓	✓	✓	✓	✓
Front foot	✓	✓	✓	✓	✓	✓
OPTIONAL						
Surcharge for Electric Switch, with wiring and joystick to be connected to the tractor distributor	-	3 mov. 4 mov.	-	3 mov. 4 mov.	-	3 mov. 4 mov.
Surcharge for electric Switch, to be assembled on the double inclination with wiring and joystick to be connected to the tractor distributor	-	3 mov. 4 mov.	-	3 mov. 4 mov.	-	3 mov. 4 mov.
Switch block for Fendt 206-209V	-	•	-	•	-	•
Surcharge for electric distributor setted up for 4 movements , with wiring and push button panel	-	•	-	•	-	•
Surcharge for electric distributor setted up for 4 movements , to be assembled on the double swinging with wiring and push button panel	-	•	-	•	-	•
Surcharge for 2 levers cloche distributor	-	•	-	•	-	•
Surcharge for higher side shift of 150mm	•	•	•	•	•	•
Surcharge loading block "maxi L"	•	•	•	•	•	•
Surcharge loading block "maxi XL"	•	•	•	•	•	•
Surcharge for folding loading block	•	•	•	•	•	•
Pump group (NOT WITH ELECTRIC SWITCH)	-	•	-	•	-	•
Surcharge for double swinging for forklifts	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.
Surcharge for a pair steel forks	•	•	•	•	•	•
Surcharge for a pair of FEM2 forks with plate support	•	•	•	•	•	•
Surcharge pair of FEM2 folding forks with plate support	•	•	•	•	•	•
Surcharge for a pair of FRS forks	•	•	•	•	•	•
Surcharge for round bales (IN PLACE OF FORKS)	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400

✓ STANDARD EQUIPMENT | • OPTIONAL EQUIPMENT | - NOT AVAILABLE





OHP 20



OHP 3 MOVEMENTS: LIFT / INCLINATION / SIDE SHIFT MOVEMENT
OHP 4 MOVEMENTS: LIFT / INCLINATION / SIDE SHIFT MOVEMENT /
LOADING BLOCK

- TR: WITHOUT DISTRIBUTOR AND WITH PIPES WITH QUICK COUPLINGS TO
BE CONNECTED TO THE TRACTOR DISTRIBUTOR
- IR: WITH DISTRIBUTOR AND PIPES WITH QUICK COUPLINGS TO BE
CONNECTED TO THE TRACTOR OIL INLET

MODEL	 KG	 KG			 cm	 L MIN.
OHP 20 250 3TR (3 movements)	470	2000	250	55-75	108	50
OHP 20 250 4TR (4 movements)	547	2000	250	55-75	108	50
OHP 20 250 3IR (3 movements)	480	2000	250	55-75	108	50
OHP 20 250 4IR (4 movements)	560	2000	250	55-75	108	50
OHP 20 320 3TR (3 movements)	520	2000	320	55-75	108	50
OHP 20 320 4TR (4 movements)	597	2000	320	55-75	108	50
OHP 20 320 3IR (3 movements)	530	2000	320	55-75	108	50
OHP 20 320 4IR (4 movements)	610	2000	320	55-75	108	50
OHP 20 380 3TR (3 movements)	560	2000	380	55-75	108	50
OHP 20 380 4TR (4 movements)	637	2000	380	55-75	108	50
OHP 20 380 3IR (3 movements)	570	2000	380	55-75	108	50
OHP 20 380 4IR (4 movements)	650	2000	380	55-75	108	50

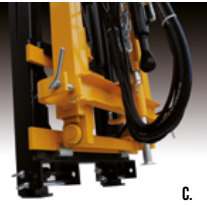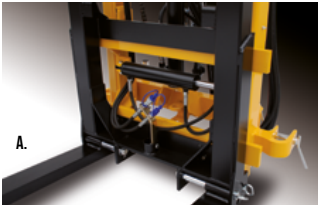  

OHP 20

FEATURES AND STANDARD EQUIPMENT:	OHP 20 250 3-4 TR	OHP 20 250 3-4 IR	OHP 20 320 3-4 TR	OHP 20 320 3-4 IR	OHP 20 380 3-4 TR	OHP 20 380 3-4 IR
Double "T" frame in laminated steel with sliding on bearings with lateral contrast coil	✓	✓	✓	✓	✓	✓
Steel forks, flexible and adjustable (B, C)	✓	✓	✓	✓	✓	✓
N.2 Lifting chains type LL 1266 (D)	✓	✓	✓	✓	✓	✓
Security chain	✓	✓	✓	✓	✓	✓
Sliding coils in special material against usury and self-lubricating (A)	✓	✓	✓	✓	✓	✓
3° Point linkage CAT. II (E)	✓	✓	✓	✓	✓	✓
Loading hook	✓	✓	✓	✓	✓	✓
Towing hook (I)	✓	✓	✓	✓	✓	✓
3° Point cylinder (run 180 Ø 70) (F)	✓	✓	✓	✓	✓	✓
Hook on the traslator for final tools	✓	✓	✓	✓	✓	✓
N. 2 Pulleys in FE360 with bearings 6305	✓	✓	✓	✓	✓	✓
Safety valve on lifting cylinder and on inclination cylinder (H)	✓	✓	✓	✓	✓	✓
Central lifting cylinder double-acting	✓	✓	✓	✓	✓	✓
N. 2 Front feet	-	-	✓	✓	✓	✓
Distributor 4 levels plugged up (3 mov.) (G)	✓	✓	✓	✓	✓	✓
OPTIONAL						
Surcharge for Electric Switch, with wiring and joystick to be connected to the tractor distributor	-	•	-	•	-	•
Surcharge for electric Switch, to be assembled on the double inclination with wiring and joystick to be connected to the tractor distributor	-	•	-	•	-	•
Switch block for Fendt 206-209V	-	•	-	•	-	•
Surcharge for electric distributor setted up for 4 movements , with wiring and push button panel	-	•	-	•	-	•
Surcharge for electric distributor setted up for 4 movements , to be assembled on the double swinging with wiring and push button panel	-	•	-	•	-	•
Surcharge for 2 levers cloche distributor	-	•	-	•	-	•
Surcharge for higher side shift of 150mm	•	•	•	•	•	•
Surcharge loading block "maxi L"	•	•	•	•	•	•
Surcharge loading block "maxi XL"	•	•	•	•	•	•
Surcharge for folding loading block	•	•	•	•	•	•
Pump group (NOT WITH ELECTRIC SWITCH)	-	•	-	•	-	•
Surcharge for double swinging for forklifts	•	•	•	•	•	•
Surcharge for a pair steel forks	•	•	•	•	•	•
Surcharge for a pair of FEM2 forks with plate support	•	•	•	•	•	•
Surcharge pair of FEM2 folding forks with plate support	•	•	•	•	•	•
Surcharge for round bales (IN PLACE OF FORKS)	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400
Surcharge for accessories connection set up (pipes and quick coupling on the side shift lever) (3 movements)	•	•	•	•	•	•



✓

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Саранск (8342)22-96-24
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

Адрес: <https://orsi.nt-rt.ru> || эл.почта: ois@nt-rt.ru