

OHS 1300, 1500, 1800

ГИДРАВЛИЧЕСКИЕ ПОДЪЕМНИКИ

ТЕХ. ХАРАКТЕРИСТИКИ

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-4159
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Саранск (8342)22-96-24
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70


Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

Адрес: <https://orsi.nt-rt.ru> || эл.почта: ois@nt-rt.ru

OHS 1300

 FEATURES AND STANDARD EQUIPMENT:	OHS 1300 180 1-2-3-4 TR	OHS 1300 180 2-3-4 IR	OHS 1300 210 1-2-3-4 TR	OHS 1300 210 2-3-4 IR	OHS 1300 250 1-2-3-4 TR	OHS 1300 250 2-3-4 IR	OHS 1300 280 1-2-3-4 TR	OHS 1300 280 2-3-4 IR
Frame in steel with direct touch	✓	✓	✓	✓	✓	✓	✓	✓
Forks in section, flexible and adjustable (B, C)	✓	✓	✓	✓	✓	✓	✓	✓
N. 2 Lifting chains type BL 534	✓	✓	✓	✓	✓	✓	✓	✓
Security chain	✓	✓	✓	✓	✓	✓	✓	✓
Sliding coils in special material against usury and self-lubricating (A)	✓	✓	✓	✓	✓	✓	✓	✓
3° Point linkage CAT. I (E)	✓	✓	✓	✓	✓	✓	✓	✓
Loading hook	✓	✓	✓	✓	✓	✓	✓	✓
Towing hook (H)	✓	✓	✓	✓	✓	✓	✓	✓
3° Point cylinder (run 180 Ø 60) (F)	✓	✓	✓	✓	✓	✓	✓	✓
Hook on the traslator for final tools	✓	✓	✓	✓	✓	✓	✓	✓
N. 2 Pulleys in FE360 with bearings 6305	✓	✓	✓	✓	✓	✓	✓	✓
Safety valve on lifting cylinder and on inclination cylinder (G)	✓	✓	✓	✓	✓	✓	✓	✓
Central lifting cylinder double-acting	✓	✓	✓	✓	✓	✓	✓	✓
OPTIONAL								
Surcharge for Electric Switch, with wiring and joystick to be connected to the tractor distributor	-	• 3-4 mov.	-	• 3-4 mov.	-	• 3-4 mov.	-	• 3-4 mov.
Surcharge for electric Switch, to be assembled on the double inclination with wiring and joystick to be connected to the tractor distributor	-	• 3-4 mov.	-	• 3-4 mov.	-	• 3-4 mov.	-	• 3-4 mov.
Switch block for Fendt 206-209V	-	•	-	•	-	•	-	•
Surcharge for electric distributor setted up for 4 movements , with wiring and push button panel	-	•	-	•	-	•	-	•
Surcharge for electric distributor setted up for 4 movements , to be assembled on the double swinging with wiring and push button panel	-	•	-	•	-	•	-	•
Surcharge for 2 levers cloche distributor	-	•	-	•	-	•	-	•
Surcharge for higher side shift of 150mm	•	•	•	•	•	•	•	•
Surcharge loading block "maxi L"	•	•	•	•	•	•	•	•
Surcharge loading block "maxi XL"	•	•	•	•	•	•	•	•
Surcharge for folding loading block	•	•	•	•	•	•	•	•
Pump group (NOT WITH ELECTRIC SWITCH)	-	•	-	•	-	•	-	•
3° Point linkage CAT. II 13q	•	•	•	•	•	•	•	•
Surcharge for double swinging for forklifts	3-4 mov.	3-4 mov.	3-4 mov.	3-4 mov.	3-4 mov.	3-4 mov.	3-4 mov.	3-4 mov.
Surcharge for a pair steel forks	•	•	•	•	•	•	•	•
Surcharge for a pair of FEM2 forks with plate support	•	•	•	•	•	•	•	•
Surcharge pair of FEM2 folding forks with plate support	•	•	•	•	•	•	•	•
Surcharge for a pair of FRS forks	•	•	•	•	•	•	•	•
Surcharge for round bales (IN PLACE OF FORKS)	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400

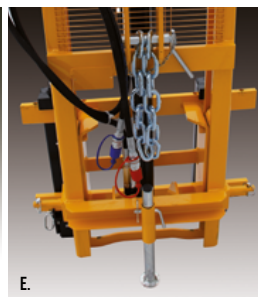


✓

OHS 1500




MODEL	 KG	 KG			 cm	 L.MIN.
OHS 1500 320 1TR (1 movement)	350	1500	320	55-75	108	50
OHS 1500 320 2TR (2 movements)	360	1500	320	55-75	108	50
OHS 1500 320 3TR (3 movements)	380	1500	320	55-75	108	50
OHS 1500 320 4TR (4 movements)	457	1500	320	55-75	108	50
OHS 1500 320 2IR (2 movements)	375	1500	320	55-75	108	50
OHS 1500 320 3IR (3 movements)	390	1500	320	55-75	108	50
OHS 1500 320 4IR (4 movements)	470	1500	320	55-75	108	50
OHS 1500 380 1TR (1 movement)	370	1500	380	55-75	108	50
OHS 1500 380 2TR (2 movements)	380	1500	380	55-75	108	50
OHS 1500 380 3TR (3 movements)	400	1500	380	55-75	108	50
OHS 1500 380 4TR (4 movements)	477	1500	380	55-75	108	50
OHS 1500 380 2IR (2 movements)	395	1500	380	55-75	108	50
OHS 1500 380 3IR (3 movements)	410	1500	380	55-75	108	50
OHS 1500 380 4IR (4 movements)	490	1500	380	55-75	108	50

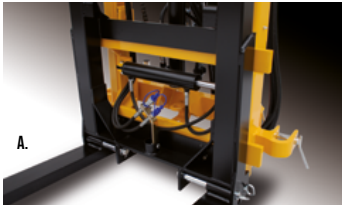 

OHS 1500

FEATURES AND STANDARD EQUIPMENT:	OHS 1500 320 1-2-3-4 TR	OHS 1500 320 2-3-4 IR	OHS 1500 380 1-2-3-4 TR	OHS 1500 380 2-3-4 IR
Frame in steel with direct touch	✓	✓	✓	✓
Forks in section, flexible and adjustable (B, C)	✓	✓	✓	✓
N. 2 Lifting chains type BL 534	✓	✓	✓	✓
Security chain	✓	✓	✓	✓
Sliding coils in special material against usury and self-lubricating (A)	✓	✓	✓	✓
3° Point linkage CAT. II (E)	✓	✓	✓	✓
Loading hook	✓	✓	✓	✓
Towing hook (H)	✓	✓	✓	✓
3° Point cylinder (run 180 Ø 60) (F)	✓	✓	✓	✓
Hook on the traslator for final tools	✓	✓	✓	✓
N. 2 Pulleys in FE360 with bearings 6305	✓	✓	✓	✓
Safety valve on lifting cylinder and on inclination cylinder (G)	✓	✓	✓	✓
Front foot	✓	✓	✓	✓
Central lifting cylinder double-acting	✓	✓	✓	✓
OPTIONAL				
Surcharge for Electric Switch, with wiring and joystick to be connected to the tractor distributor	-	• 3 mov. 4 mov.	-	• 3 mov. 4 mov.
Surcharge for electric Switch, to be assembled on the double inclination with wiring and joystick to be connected to the tractor distributor	-	• 3 mov. 4 mov.	-	• 3 mov. 4 mov.
Switch block for Fendt 206-209V	-	•	-	•
Surcharge for electric distributor settet up for 4 movements , with wiring and push button panel	-	•	-	•
Surcharge for electric distributor settet up for 4 movements , to be assembled on the double swinging with wiring and push button panel	-	•	-	•
Surcharge for 2 levers cloche distributor	-	•	-	•
Surcharge for higher side shift of 150mm	•	•	•	•
Surcharge loading block "maxi L"	•	•	•	•
Surcharge loading block "maxi XL"	•	•	•	•
Surcharge for folding loading block	-	•	-	•
Pump group (NOT WITH ELECTRIC SWITCH)	-	•	-	•
Surcharge for double swinging for forklifts	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.
Surcharge for a pair steel forks	•	•	•	•
Surcharge for a pair of FEM2 forks with plate support	•	•	•	•
Surcharge pair of FEM2 folding forks with plate support	•	•	•	•
Surcharge for a pair of FRS forks	•	•	•	•
Surcharge for round bales (IN PLACE OF FORKS)	• 36x1400 42x1400	• 36x1400 42x1400	• 36x1400 42x1400	• 36x1400 42x1400

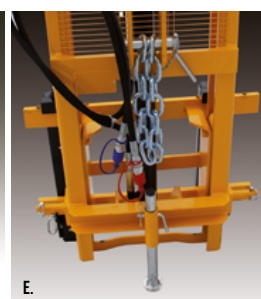 

OHS 1800



OHS 1 MOVEMENT: LIFT
OHS 2 MOVEMENTS: LIFT / INCLINATION
OHS 3 MOVEMENTS: LIFT / INCLINATION / SIDE SHIFT MOVEMENT
OHS 4 MOVEMENTS: LIFT / INCLINATION / SIDE SHIFT MOVEMENT /
LOADING BLOCK



TR: WITHOUT DISTRIBUTOR AND WITH PIPES WITH QUICK COUPLINGS TO
BE CONNECTED TO THE TRACTOR DISTRIBUTOR
IR: WITH DISTRIBUTOR AND PIPES WITH QUICK COUPLINGS TO BE
CONNECTED TO THE TRACTOR OIL INLET

MODEL	 KG	 KG			 cm	 L.MIN.
OHS 1800 250 1TR (1 movement)	340	1800	250	55-75	108	50
OHS 1800 250 2TR (2 movements)	350	1800	250	55-75	108	50
OHS 1800 250 3TR (3 movements)	365	1800	250	55-75	108	50
OHS 1800 250 4TR (4 movements)	402	1800	250	55-75	108	50
OHS 1800 250 2IR (2 movements)	380	1800	250	55-75	108	50
OHS 1800 250 3IR (3 movements)	395	1800	250	55-75	108	50
OHS 1800 250 4IR (4 movements)	415	1800	250	55-75	108	50
OHS 1800 320 1TR (1 movement)	360	1800	320	55-75	108	50
OHS 1800 320 2TR (2 movements)	370	1800	320	55-75	108	50
OHS 1800 320 3TR (3 movements)	390	1800	320	55-75	108	50
OHS 1800 320 4TR (4 movements)	467	1800	320	55-75	108	50
OHS 1800 320 2IR (2 movements)	385	1800	320	55-75	108	50
OHS 1800 320 3IR (3 movements)	400	1800	320	55-75	108	50
OHS 1800 320 4IR (4 movements)	480	1800	320	55-75	108	50
OHS 1800 380 1TR (1 movement)	380	1800	380	55-75	108	50
OHS 1800 380 2TR (2 movements)	390	1800	380	55-75	108	50
OHS 1800 380 3TR (3 movements)	410	1800	380	55-75	108	50
OHS 1800 380 4TR (4 movements)	487	1800	380	55-75	108	50
OHS 1800 380 2IR (2 movements)	405	1800	380	55-75	108	50
OHS 1800 380 3IR (3 movements)	420	1800	380	55-75	108	50
OHS 1800 380 4IR (4 movements)	500	1800	380	55-75	108	50




OHS 1800

FEATURES AND STANDARD EQUIPMENT:	OHS 1800 250 1-2-3-4 TR	OHS 1800 250 2-3-4 IR	OHS 1800 320 1-2-3-4 TR	OHS 1800 320 2-3-4 IR	OHS 1800 380 1-2-3-4 TR	OHS 1800 380 2-3-4 IR
Frame in steel with direct touch	✓	✓	✓	✓	✓	✓
Forks in section, flexible and adjustable (B, C)	✓	✓	✓	✓	✓	✓
N. 2 Lifting chains type BL 534	✓	✓	✓	✓	✓	✓
Security chain	✓	✓	✓	✓	✓	✓
Sliding coils in special material against usury and self-lubricating (A)	✓	✓	✓	✓	✓	✓
3° Point linkage CAT. II (E)	✓	✓	✓	✓	✓	✓
Loading hook	✓	✓	✓	✓	✓	✓
Towing hook (H)	✓	✓	✓	✓	✓	✓
3° Point cylinder (run 180 Ø 60) (F)	✓	✓	✓	✓	✓	✓
Hook on the traslator for final tools	✓	✓	✓	✓	✓	✓
N. 2 Pulleys in FE360 with bearings 6305	✓	✓	✓	✓	✓	✓
Safety valve on lifting cylinder and on inclination cylinder (G)	✓	✓	✓	✓	✓	✓
Central lifting cylinder double-acting	✓	✓	✓	✓	✓	✓
Front foot	✓	✓	✓	✓	✓	✓
OPTIONAL						
Surcharge for Electric Switch, with wiring and joystick to be connected to the tractor distributor	-	3 mov. 4 mov.	-	3 mov. 4 mov.	-	3 mov. 4 mov.
Surcharge for electric Switch, to be assembled on the double inclination with wiring and joystick to be connected to the tractor distributor	-	3 mov. 4 mov.	-	3 mov. 4 mov.	-	3 mov. 4 mov.
Switch block for Fendt 206-209V	-	•	-	•	-	•
Surcharge for electric distributor setted up for 4 movements , with wiring and push button panel	-	•	-	•	-	•
Surcharge for electric distributor setted up for 4 movements , to be assembled on the double swinging with wiring and push button panel	-	•	-	•	-	•
Surcharge for 2 levers cloche distributor	-	•	-	•	-	•
Surcharge loading block "maxi L"	•	•	•	•	•	•
Surcharge loading block "maxi XL"	•	•	•	•	•	•
Surcharge for folding loading block	•	•	•	•	•	•
Pump group (NOT WITH ELECTRIC SWITCH)	-	•	-	•	-	•
Surcharge for double swinging for forklifts	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.	3 mov. 4 mov.
Surcharge for a pair steel forks	•	•	•	•	•	•
Surcharge for a pair of FEM2 forks with plate support	•	•	•	•	•	•
Surcharge pair of FEM2 folding forks with plate support	•	•	•	•	•	•
Surcharge for a pair of FRS forks	•	•	•	•	•	•
Surcharge for round bales (IN PLACE OF FORKS)	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400	36x1400 42x1400



 D.

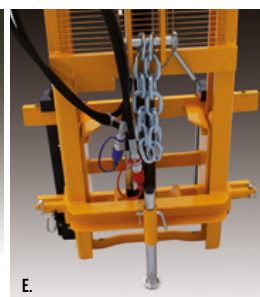

E.



F.



(4M) LOADING BLOCK



G.



H.

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Саранск (8342)22-96-24
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

Адрес: <https://orsi.nt-rt.ru> || эл.почта: ois@nt-rt.ru